American Standard

Fluent® Pressure Balancing Bath and Shower Trim Kit

INSTALLATION
INSTRUCTIONS
TU186500
TU186501
TU186501XH
TU186502
TU186507
TU186508

Thank you for selecting American Standard... the benchmark of fine quality for over 140 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

For use with shower heads rated at 4.9 L/min (1.3 gpm) or higher.









Teflon Tape



Flat Blade Screwdriver

(204 mm)

4" (102 mm)

1/2" COPPER



Adjustable Wrench




Channel Locks

ROUGHING-IN DIMENSIONS

• To assure proper positioning in relation to wall. Note roughing-in dimensions. 1-7/8" to 3-1/4" (48 to 83 mm) 1/2" NPT 3-3/4" REF (95 mm) OPTIONAL TO FINISHED FLOOR USUALLY BETWEEN 65" AND 80" (1651 and 2032 mm)¹ (179 mm) 7-1/2" REF. (191 mm) 2-3/4" MAX. (69 mm) 1-3/4" MIN. (45 mm) FINISHED WALL 74" FOR HEAD CLEARANCE (1880 mm) 8" DIA

1 CARTRIDGE INSTALLATION

- Remove PLASTER GUARD (6) (Keep it installed for thin wall Installation).
- Remove BONNET NUT (1) by unthreading it Counter clockwise. Remove test CAP (2).
- Remove PROTECTIVE HOUSING (3) from CARTRIDGE (4). Install with "UP" text on top.
- Reinstall BONNET NUT (1) onto VALVE BODY (5) and tighten firmly with 12 Nm or 9 lbs/ft.

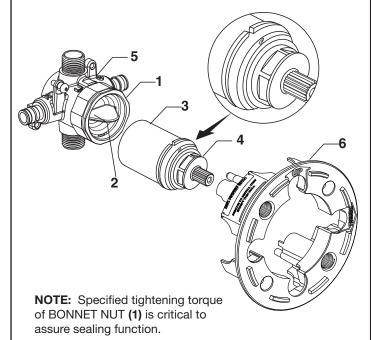

18" OPTIONAL (457 mm)

(44 mm)

TOP OF TUB RIM

6-19/32" REF.

(167 mm)


BOTTOM OF TUB

2 STANDARD WALL INSTALLATION

- Figure 1. Remove plaster guard from valve. Push CAP (1) over VALVE CARTRIDGE (2) until seated against stop.
- Figure 2. Push ESCUTCHEON (3) onto CAP (1) and attach to valve body with LONG SCREWS (4).

THIN WALL INSTALLATION

- Figure 1a. Push CAP (1) over VALVE CARTRIDGE (2) until seated against stop.
- Figure 2a. Push ESCUTCHEON (3) onto CAP (1) and attach to valve body with LONG SCREWS (4).

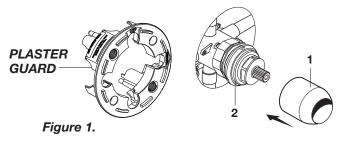



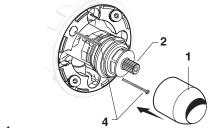


Figure 1a.

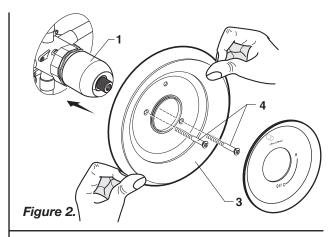

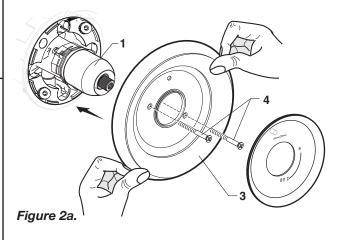

INSTALL, TUB SPOUT, SHOWER HEAD, SHOWER ARM WITH FLANGE


CAUTION

Protect finish on SHOWER HEAD and TUB SPOUT when installing.

Note: Apply sealant or Teflon Tape to shower arm.


- Remove PIPE PLUG and CAP (1, 2) from shower pipe and tub filler pipe.
- Install SHOWER ESCUTCHEON (3) onto SHOWER ARM (4).
 Apply sealant or Teflon tape to threads on both ends of SHOWER ARM (4) and thread longer leg of SHOWER ARM (4) into shower elbow. Thread SHOWER HEAD (5) onto SHOWER ARM (4).
- Install SLIP-ON TUB SPOUT (6). Tighten SET SCREW (7) awith HEX WRENCH supplied

Important: Do not overtighten Set Screw.

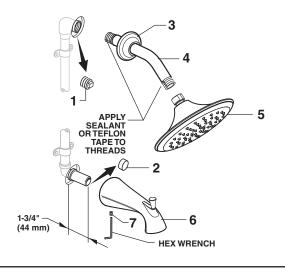


4 INSTALL HANDLE

- Hold ADAPTER (1) onto VALVE STEM (2) and install ADAPTER SCREW (3) through ADAPTER (1) into VALVE STEM (2). Tighten ADAPTER SCREW (3) to secure ADAPTER (1).
- Install HANDLE BASE (4) onto ADAPTER (1). Tighten SET SCREW (5) with HEX WRENCH (6) supplied.

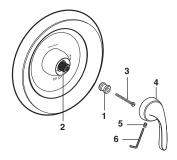

5 ADJUST HOT LIMIT STOP

- By restricting HANDLE rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP (1) reduces risk of accidental scalding. To set the maximum hot water temperature of your faucet valve, adjust the setting on the HOT LIMIT SAFETY STOP (1).
- Turn CARTRIDGE STEM (2) to the OFF position (coldest setting) before
 making adjustment to HOT LIMIT STOP (1). Pull forward and rotate
 counterclockwise one number to limit hot water temperature.
 Use NUMBERS (5) on CARTRIDGE (4) on HOT LIMIT STOP (1)
 for indication.

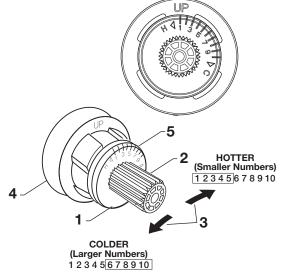

6 SERVICE

TO GAIN ACCESS TO VALVE FOR SERVICING

CAUTION Turn off hot and cold water supplies before beginning.

- Remove HANDLE (see step 3 and reverse).
- Remove ESCUTCHEON and CARTRIDGE CAP (see step 1 and reverse).

VALVE LEAKS WHEN SHUT OFF


- Remove CARTRIDGE, see STEP 1 and STEP 2 and REVERSE process.
- Clean SEALS on the side of CARTRIDGE. Clean inside sealing surface of VALVE BODY.
- Re-assemble CARTRIDGE. Install trim. Turn on water supply and check for leaks.

REPLACING CARTRIDGE


- To remove CARTRIDGE (1), install split WASHER (3) between the ridge on the cartridge and the bonnet nut.
 (only supplied with replacement cartridge). as shown.
- Proceed to unthread BONNET NUT (2) counter clockwise.
 Note: CARTRIDGE (1) should be pulling out while unthreading BONNET NUT (2).
- Upon removal of the old Cartridge, install a new cartridge and secure it with BONNET NUT (Hand tighten).

BACK TO BACK INSTALLATION

- Remove CARTRIDGE (B) as detailed in steps above.
- Remove PIN (A) from CARTRIDGE (B) by pulling.
- Separate MANIFOLD (C) from CARTRIDGE (B) by pulling.
- Rotate CARTRIDGE (B) 180 degrees and reinstall MANIFOLD (C) with PIN (A).
- The "UP" TEXT **(D)** should now be facing downward during installation of the CARTRIDGE **(B)**.

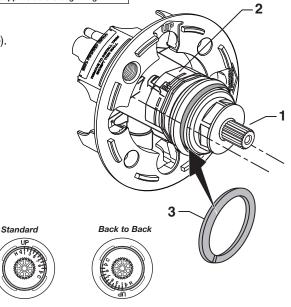

BACK TO BACK INSTALLATION

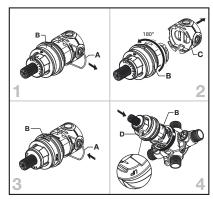

7 CARE INSTRUCTIONS:


DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

American Standard


Fluent®

Pressure Balancing Bath and Shower Trim Kit

MODEL NUMBERS

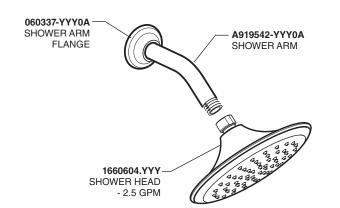

TU186500 TU186501 TU186501XH TU186501 TU186502 TU186507 TU186508

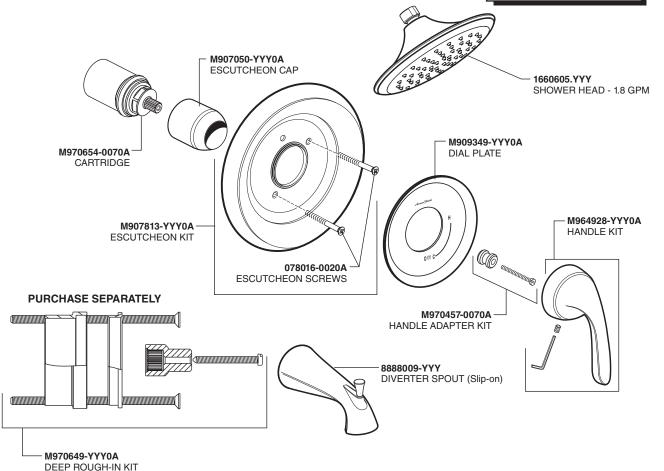

Replace the "YYY" with appropriate finish code

POLISHED CHROME	002
BRUSHED NICKEL	295
LEGACY BRONZE	278

HOT LINE FOR HELP

For toll-free information and answers to your questions, call: 1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200

