Preston Technical Specification

Toothbrush & Soap Holder DN8444 & DN8466


Stock Numbers:

- DN8444PB Toothbrush Holder
 Polished Brass Finish
 Concealed Screw Mounting
- Q DN8444CH Toothbrush Holder Polished Chrome Finish Concealed Screw Mounting
- Q DN8444MPW Toothbrush Holder Matte Pewter Finish Concealed Screw Mounting
- q DN8466PB Soap Holder Polished Brass Finish Concealed Screw Mounting
- q DN8466CH Soap Holder Polished Chrome Finish Concealed Screw Mounting
- q DN8466MPW Soap Holder Matte Pewter Finish Concealed Screw Mounting

Materials:

Toothbrush & Soap Holders are die cast from highest quality zinc alloy (zamac). Castings are triple plated with a polished brass, polished chrome, or matte pewter finish.

Dimensions:

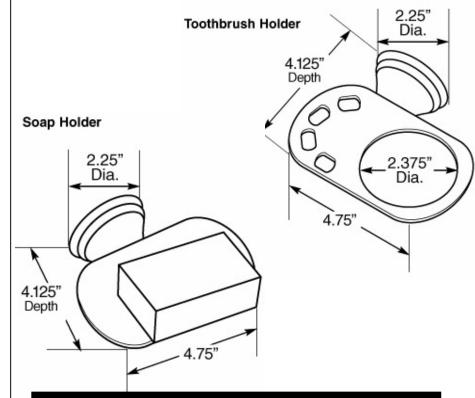

Installation Instructions:

- 1. Position the mounting plate on the wall at desired location with "UP" facing you.
- One at a time, place each anchor screw through the mounting plate, centered in each large hole. Using a Phillips screwdriver, turn the anchor screw while applying pressure. Screw will self drill and tap into drywall. Do not over tighten.
- 3. Place assembly over the mounting post, setscrew facing down.
- 4. Tighten setscrew.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:_____Toothbrush & Soap Holders By CSI Bath Furnishings



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 (800) 321-8809 • FAX: (800) 848-6636 • INTERNATIONAL: (440) 962-2000 •

FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116

©Copyright CSI Bath Furnishing Division of Moen 02/22/01